

How is overloading a vehicle likely to occur?

- Lack of knowledge or training.
- Ignoring legal compliance.

Ensure robust company policies are in place - including training and regular risk assessments.

Axle and GVW (vans up to 3500kg)

- Don't overload - GVW or axles.
- Each axle has a maximum specified weight.
- Understand the meaning of Train Weight.
- Detail - specified on manufacturers plate.
- Unladen weight is not on the plate.

Example of a Manufactures plate:

YYZ162789374097XZ

The Motor Company

4500

2500

1. 1300 kg

2. 1500 kg